

# Adjusting an *ECU*® speed switch with jumpers


## Overspeed Jumper

To adjust overspeed you will have to place the jumper on the speed verify pins. This causes the speed switch to think the engine is going about 13% faster than it actually is. See the adjustments page on adjusting pots. Remember to remove the jumper when you are done.



## Latching Jumpers

If your unit has the OS and CD jumper pins you may adjust your unit to either latch or not latch. If both jumpers are off the unit will reset at an unspecified low speed. Unit to unit differences do not allow the use of the device for a underspeed sensor. It will simply reset automatically without removal of power. Latched units require the removal of battery positive to reset.

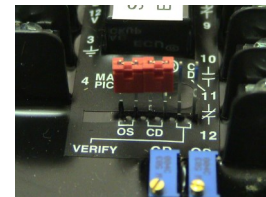

	Jumper ON	Jumper OFF
CD jumper	Standard Latch	Self resetting
OS jumper	Standard Latch	Self resetting