

ECU® Trouble Shoot Guide for Voltage Detector Modules

Refer to the VLD1 or VLD2 application drawing and manual when using this guide.

Topics

[General things to check](#)

General things to check

1. Voltage detector doesn't trip

Be sure you have battery negative connected to lamps
Be sure you have voltage on the input pin
If it is a VLD2 be sure you have the right voltage version
there is a 12 VDC and 24 VDC version
See the manual and adjustments information to reset unit

2. I have a VLD2 and I hear the relay clicking but my loads are not turning on

Be sure you have put voltage on one side of the dry normally open contacts or nothing will happen when they close. Be sure your loads are connected one side to battery negative

3. I am still having trouble

Do not hesitate to call us at 317-849-8470